

## Installing a LinMot motor on LW guide


Do not use any PB01 bearing on the stator

---

- 1/ Screw the front of the stator on the front guide (4 screws)  
Screw the back of the stator on the back guide (4 screws)
- 2/ Insert the red wiper seals (wiper lip outside) on both plates



- 3/ Insert the slider from the back (through the rear plate)  
(mounting direction according to LinMot advice)  
Put the cylindrical stop on the front slider's tip  
Place the screw and cup washers (see drawing)  
Put **lock wire** on the screw

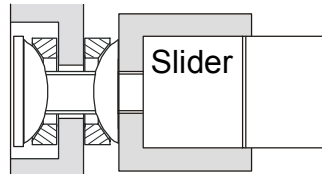

- 4/ Check that slider is **centered** on wiper seal in its housing  
Tighten and torque the screw at the slider's tip  
with the guide **in the back position**



- 5/ Check maxi stroke