

Installing a Linmot motor on LX guide unit

1/ Fix the bearing PB01 on the back of the stator (4 screws)




2/ Screw the front of the stator on the guide (4 screws)



3/ Insert the red wiper seal (wiper lip outside)

4/ Insert the slider from the back
(mounting direction according to LinMot advice)
Put 1 cylindrical stop on the slider's tip
Place the screw and cup washers (see drawing)
Put **lock wire** on the screw

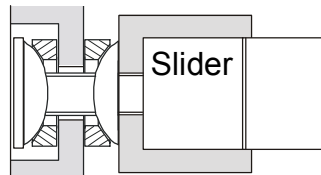

5/ Check that slider is **centered** on wiper seal in its housing
Tighten and torque the screw at the slider's tip
with the guide **in the back position**



6/ Screw the 2nd cylindrical stop on the back of the slider
Check maxi stroke between stops

